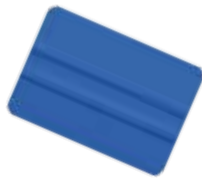


**FOR BEST RESULTS, EMPLOY THE FOLLOWING PRE-INSTALL AND APPLICATION TECHNIQUES:**

- 109 & 211 series laminates are recommended for 212 Carpet - Traffic Graffix®. The thicker laminates are more resist to puncturing from high heels.
- Apply carpet graphics only to low pile industrial-commercial carpet (without underlayment padding).
- Carpet must be clean, dry and vacuumed before application.
- Apply graphic with a firm *Basic squeegee to ensure best contact with the carpet fibers. Work the outside edges of the graphic from one side to another using overlapping strokes.

***Basic Squeegee**

- For best application of large multiple panel graphics, a 1"-1.5" overlap is recommended at the seams.

REMOVAL:

- To remove the carpet graphic, start by lifting one edge and pulling slowly and evenly back at a 180-degree angle. (It is normal to see some carpet fibers on the adhesive side after removal)
- Once the graphic is removed, resume normal care of the carpet.

NOTE:

Carpet graphics, like all floor graphic applications, can act as a barrier that protects the underlying carpet from dirt, debris, and wear. When a graphic is applied for an extended period of time or in a high traffic area, an outline of the graphic may be visible upon graphic removal. If the outline is still apparent after normal vacuuming, a manufacturer-recommended carpet cleaning procedure can be used to return the entire area to its original uniform appearance.

***See next page for installation steps.**



1. Make sure carpet is thoroughly cleaned, dry and vacuumed.



2. Remove edge of release liner from back of graphic.



3. Apply the edge of the graphic to the carpet using overlapping strokes while slowly pulling back the release liner.



4. Make sure edges are firmly adhered and flat to the carpet.